



SR-DVM700 and NLE

What you won't find in the manual

- There are **two** independent input selections:
 - First choose the drive for which you want to change the input configuration:
 - If you select „DV“ Mode you can choose the input for the DV deck only
 - If you select „DVD or HDD“ Mode you can choose the input for the DVD and HDD drive only

■ Export to HDD:

- Select HDD Mode, Choose inputs as follows:
 - Set HDD/DVD to "DV",
 - DV drive should NOT be set to „DV“ select either L-1 or F-1
- Load desired project in NLE and open "Export to Tape" or similar function in NLE.
- Start Export normally. No pre-roll should be configured in NLE.
- The DV footage from the NLE will be copied 1:1 to the HDD of the SR-DVM700.
- After this procedure the DV Clip should appear in the menu of the SR-DVM700.

■ Export to DVD:

- Select DVD Mode, Choose inputs as follows:
 - Set HDD/DVD to "DV",
 - DV drive should NOT be set to „DV“ select either L-1 or F-1
- Load desired project in NLE and open "Export to Tape" or similar function in NLE.
- Load a blank DVD into the tray
- Set DVD encoding quality in SR-DVM700 as usual
- Start Export normally. No pre-roll should be configured in NLE.
- The DV footage from the NLE will be encoded to MPEG-2 in real time and burned to the DVD
- Finalize the DVD as usual.

■ Capture from HDD

- Select DVD Mode, Choose inputs as follows:
 - Set HDD/DVD to "DV",
 - **DV drive should NOT be set to „DV“ select either L-1 or F-1**
- Use the SR-DVM700 navigation to select a DV(!) clip
- Now start the capture software of the NLE.
- The NLE capture software should allow navigation within the selected clip and capture.
- *Please take note that only **DV** clips are supported in this mode **MPEG-2** clips will not work!*